

SMART WHEEL MANUAL

# IN THE BOX







@ 2x

© 2x

Smart Wheel

Charger

Charging Cable

Axle Cover

M12 Axle Knot

# **TOOLS NEEDED**



Wrench


**NOTE:** We advise you to keep the box, in case you will ever need to send your Smart Wheel back for repair or upgrade.

# **INSTALLING THE SMART WHEEL**

Find a video: flykly.com > support > smart wheel > first installation

## Step 1

The installation is the same as with any rear wheel set. Prepare your bike to remove the rear wheel. One option is to put the bike upside down.

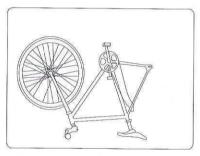


**NOTE:** With a multi-gear bike, the derailleur can stay attached on the bike frame after you remove the rear wheel.


**NOTE:** If your bike has a rear V brake, you need to disengage it before installing the Smart Wheel and engage it again, once you are finished.


**NOTE:** You need at least one brake (V (hand) brake or front disc brake) on your bike, FlyKly motor brake is not enough.

Step 2

 
Take your Smart Wheel out of the box.

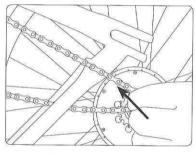




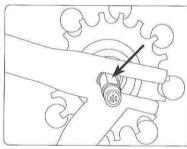

Place the Smart Wheel into the rear fork. The axle is flat on two sides in order to prevent it from rotating in place.

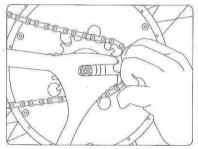


Place the chain on the sprocket.

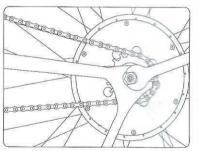


Loosely attach the first M12 axle knot. Loosely attach the second M12 axle knot on the other side.

## Step 4

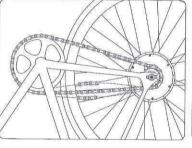


Tension the chain.

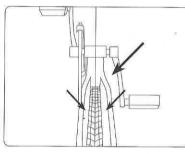


Center the wheel to the middle of the bike.

NOTE: If you have a bike with a derailleur, it will tension your chain.

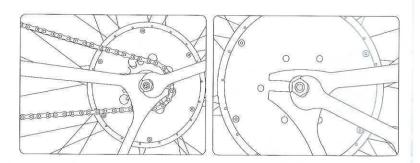


Tighten both M12 axle knots strongly.

## Step 6

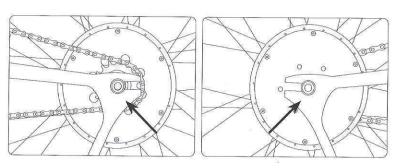

Screw on the axle covers onto the axle on both sides.

**NOTE:** Keep both axle covers on all the time to protect the charging pin. Do not ride without the axle covers.

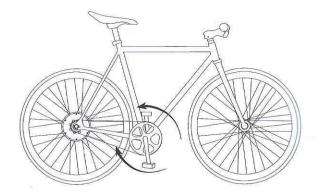

Turn the Smart Wheel on. Move the pedales back and forward, until a blue light turns on in the Smart Wheel.

### Step 8

Download the Smart Wheel App. You can find the Smart Wheel App for iOS on iTunes App Store and for Android on Google Play Store.

Connect the Smart Wheel to the Smart Wheel App.

#### For iOS users:

Go to bluetooth settings. Connect to the Smart Wheel. Pair the Smart Wheel. Open the Smart Wheel App. Click Connect.


## For Android users:

Turn on Bluetooth.
Open the Smart Wheel App.

Click Connect.
Start the Scan.

Select the Smart Wheel that was scanned.


**NOTE:** When you try to connect with the phone, come close to the blue light in the Smart Wheel.

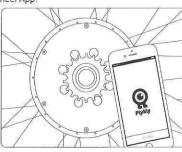


1 Register




(2) Go to Settings and Wheel Setup

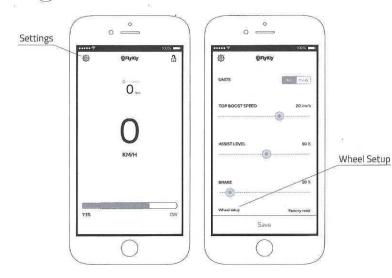

**NOTE:** This is a very important step in order to use Smart Wheel properly.

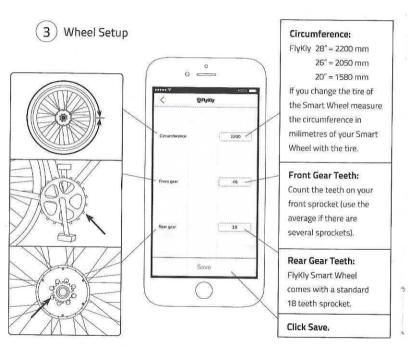

Customize Smart Wheel settings.

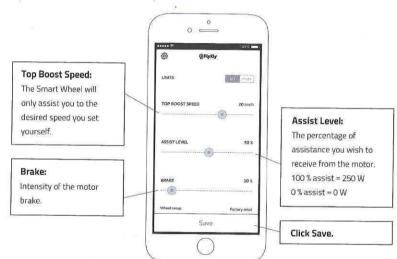


# **INSTRUCTIONS FOR USE**


# Charging

Find a video: flykly.com > support > smart wheel > charging

Step 1

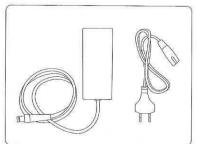


Get the charger and the cable.

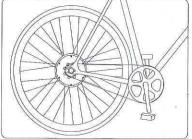


Unscrew the Axle Cover.

Step 2

Connect the charger with the Smart Wheel.

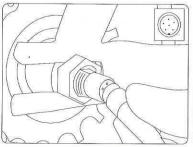



Carefully spin the charger in the socket and find the correct position in which the charger should gently fall into its place.

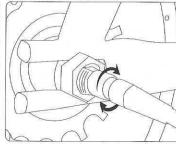

Gently turn the silver ring and screw the charger into the socket on the Smart Wheel.

Step 3

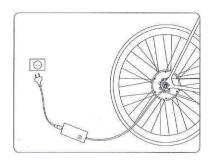

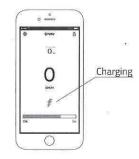


**NOTE:** The red light represents it is charging and the green light represents it is fully charged.

**NOTE:** The charger is international (100 - 240W). The cable can be replaced to work with any electrical wall socket.


## Riding
 
#### Find a video: flykly.com > support > smart wheel > riding




#### ON / OFF

 The Smart Wheel turns on automatically when you start pedaling. After 2 min of no activity, Smart Wheel automatically turns off.




#### **ASSIST**

 The Smart Wheel is pedal assist. It assists you when you are pedaling forward.



#### **NEUTRAL**

 When you are not pedaling, the Smart Wheel is in neutral.




#### BRAKE

When you pedal backwards, the motor brake engages and the Smart Wheel begins to slow you down and recharge the battery.

## App

### Ride

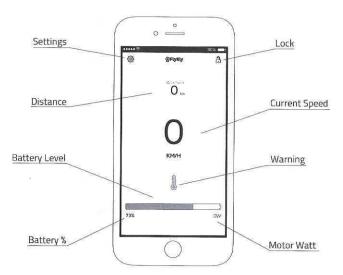

#### Lock

#### Find a video: flykly.com > support > smart wheel > locking



To lock the Smart Wheel press and hold the lock icon in the top right corner, until the ring around the lock is completed.



While the Smart Wheel is locked, a large lock appears on the screen with the estimated time the Smart Wheel can stay locked.



To unlock the Smart Wheel, hold the lock icon until the ring around the lock is completed.

**NOTE:** You will know that the wheel is locked by trying to turn the wheel and feeling resistance, when turning the wheel.

## Settings

### Units:

You can set the desired units (km, miles)

#### Customize


Top boost speed - the Smart Wheel will only assist you to the desired speed you set yourself.

**Level of assistence** - the percentage of assist you wish to receive from the motor.

**Brake** - the intensity of the motor brake

### Wheel Setup:

Set the specs of your wheel.

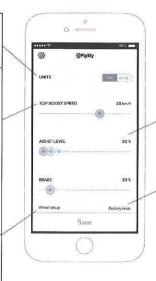

#### Turn off assist:

To turn the assist off, you simply set the top assisted speed and level of assistance to 0.

#### Factory Reset:

The factory reset will completely reset all the information you have set up on the Smart Wheel and return the Smart Wheel into its initial state.

### **Troubleshooting**

In case your Smart Wheel does not work the way you think it should, please go through this Q&A. If this did not help, please contact us at info@flykly.com.

#### A You can not connect to the Smart Wheel app:

- Make sure you downloaded the correct app. Smart Wheel app (and not FlyKly app).
- 2. Make sure that your Smart Wheel is turned on (you can see the blue light).
- 3. Make sure that Bluetooth on your phone is on.
- When you try to connect with the phone, come close to the blue light in the Smart Wheel.
- 5. Connect to the device (name starts with FlyKly \_ xxxx).
- 6. Be persistent.
- 7. If it still does not connect, visit our FAQ page section on Smart App.

#### B Your wheel does not give you any assist:

- When you were installing the Smart Wheel did you completed all the steps in this manual?
- Did you set up the wheel? (inserted circumference, front and rear teeth information?) and saved settings?
- 3. Is your % of assist level in the settings above 0%? (check in the app settings)
- 4. Is your hattery full?
- 5. Does the wheel turn on when you charge it? (you see the blue light burning)
- 6. Does the wheel charge, when you plug the charger in? (red light on charger)
- 7. Is everything ok with your charger are pins and cable ok?

If you answered all this questions with YES and your Smart Wheel still does not give you any assist, please contact us at info@flykly.com.

### Your phone says that your pin code is wrong:

- 1. Try with pin code 0000 or 1234 and log in the app.
- 2. In case it worked, go to settings, factory reset and then register it again.
- 3. In case this did not help, contact us.

#### Your sprocket does not fit the chain:

- 4. Your chain could be worned out, you might need a new one.
- Your chain is not standard and that is why it does not fit to our standard sprocket.
- Email us with the picture of your sprocket and chain, so we can tell, what is the issue and advise you about the sprocket or chain you need.

## Warning signs description


lcon	Description	Reason	Solution
•	Electronics Fault	BMS, Driver Power, Static or Dynamic. Current do not work properly.	Smart Wheel needs to be inspected. Please contact FlyKly.
	Motor Brake Disabled	Motor brake is disabled because current regulator can't work at the speeds greater than 25 km/h (16mph).	Slow down till 25km/h (16mph).
Ø	Pedal Sensor (Hall) Fault	Pedal sensor (Hall) does not work properly.	Smart Wheel needs to be inspected. Please contact FlyKly
<b>F</b> <sub>c</sub> .	Overheated	Smart Wheel is overheated.	Please wait till the Smart Wheel cools down.
<	BMS Connectivity Fault	BMS (Battery Management System) and Driver can not connect properly.	Smart Wheel needs to be inspected. Please contact FlyKly.
+	Battery Cell Voltage Fault	Battery cells do not work properly.	Smart Wheel needs to be inspected. Please contact FlyKly.

## **MAINTENANCE**

Find a video: flykly.com > support > smart wheel > maintenance

Once a month check 3 things:

- 1. The tension of the spokes and whether the Smart Wheel is centered correctly.
- 2. The air pressure in the tires.
- 3. The tension of the chain.

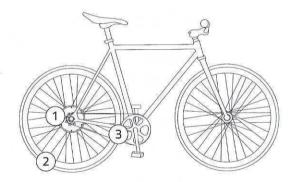

**NOTE:** We advise you to keep the box, in case you will ever need to send your Smart Wheel back for repair or upgrade.

## WARRANTY

FigKly Smart Wheel comes with one year warranty including the battery, motor, electronics and electric charger.

For additional information go to www.flykly.com/legal

## **SUPPORT**

For support please go to www.flykly.com/support

Or contact us at info@flykly.com

# **THANK YOU**

Congratulations on purchasing your new FlyKly Smart Wheel. We hope you enjoy it safely and in style. We would like to welcome you to the growing FlyKly community and wish you many years of happy riding.

Please remember, your enjoyment of your FlyKly Smart
Wheel is of the utmost importance to us. If you have
any questions, comments or concerns do not hesitate to
contact us via email info@flykly.com.

Stay Fly







© 2015 FlyKly, Inc. Made in Italy.

